

1/6
FIG. 1

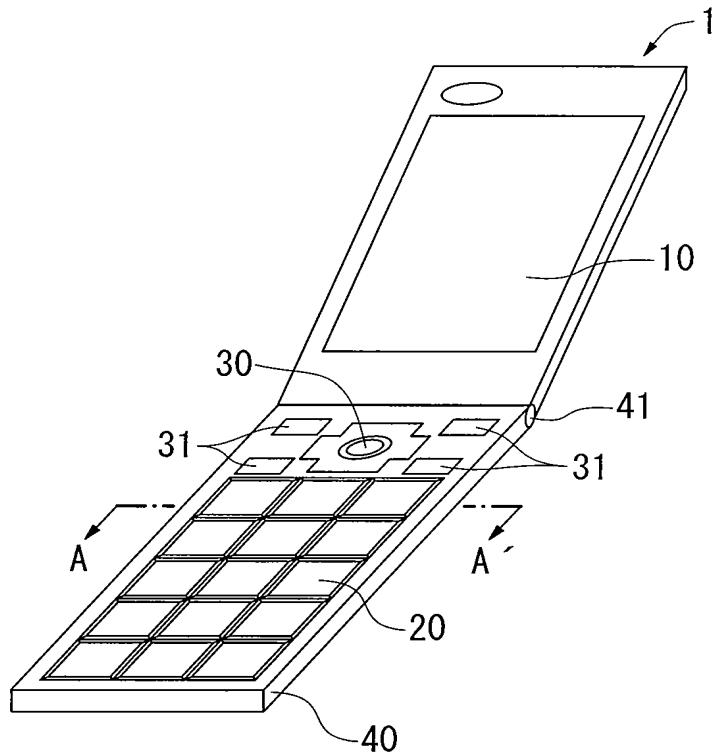


FIG. 2

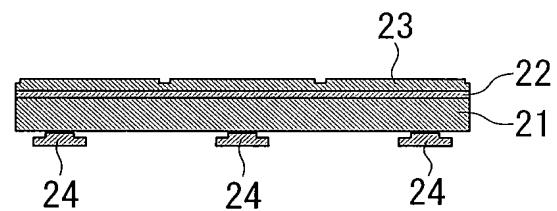


FIG. 3

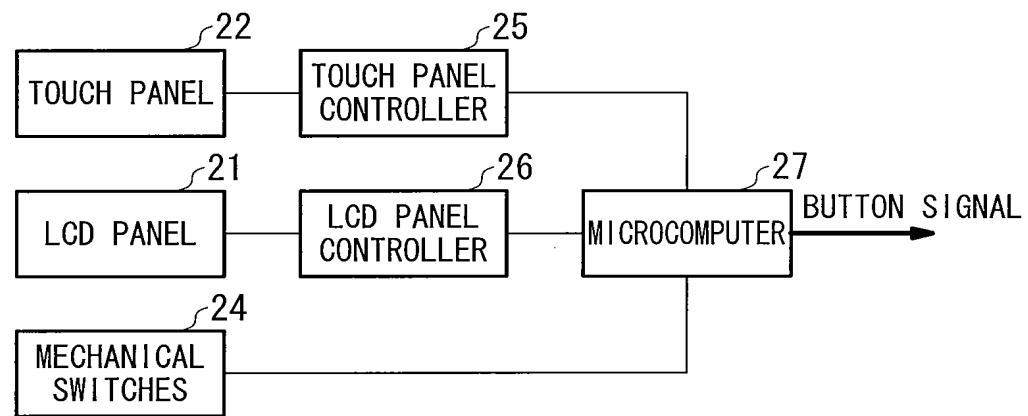


FIG. 4A

| | | |
|-------------|------------|-------------|
| ON | Clear | OFF |
| 1 あ | 2 . @ | 3 か ABC |
| 4 た GHI | 5 な JKL | 6 は MNO |
| 7 し PQRS | 8 や TUV | 9 ら WXYZ |
| * | 0 わをん.. | # |

FIG. 4B

| | | |
|----|----------|---------|
| 電源 | 音量 ▼ | 音量 ▲ |
| 1 | 2 | 3 |
| 4 | 5 | 6 |
| 7 | 8 | 9 |
| 0 | 入力 切替 | |

FIG. 4C

| | |
|-----|-----|
| POW | |
| ▲ | ▲ |
| CH | VOL |
| ▼ | ▼ |

FIG. 5A

| | | |
|-------------|----------|-------------|
| 電源 | 音量 ▼ | 音量 ▲ |
| 巻戻し << | 再生 > | 早送り >> |
| スキップ << | 一時停止 | スキップ >> |
| 停止 ■ | | |

FIG. 5B


| | | |
|------------|-----------|------------|
| POWER | Vol ▼ | Vol ▲ |
| | STILL | |
| REW << | PLAY > | FEW >> |
| STOP ■ | | |

FIG. 5C

| | | |
|------------|-----------|----------|
| 電源 | 温度 ▼ | 温度 ▲ |
| 運転 切替 | ドライ 調節 | 冷房 涼感 |
| 風速 | 風向 上下 | 風向 左右 |
| タイマー 切替 | 時間 進む | 時間 戻る |

5/6

FIG. 6

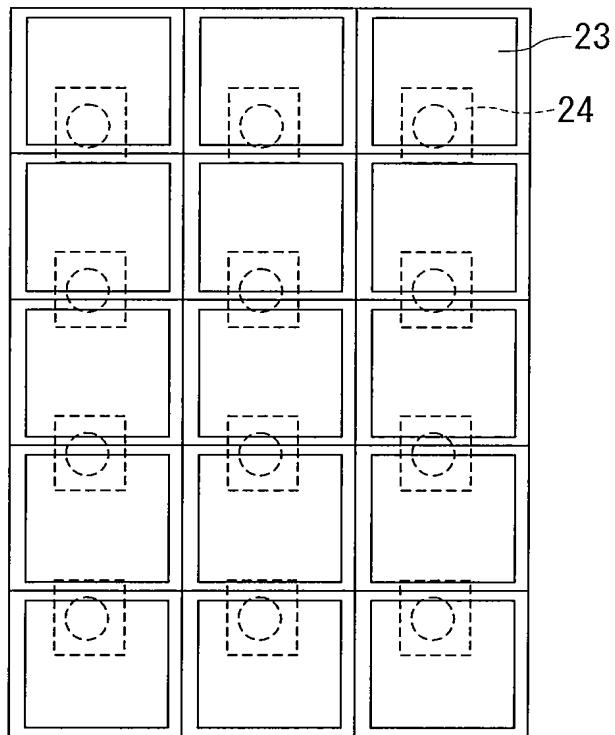

6/6

FIG. 7A

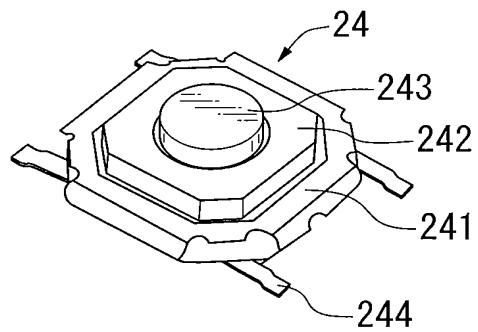


FIG. 7B

